
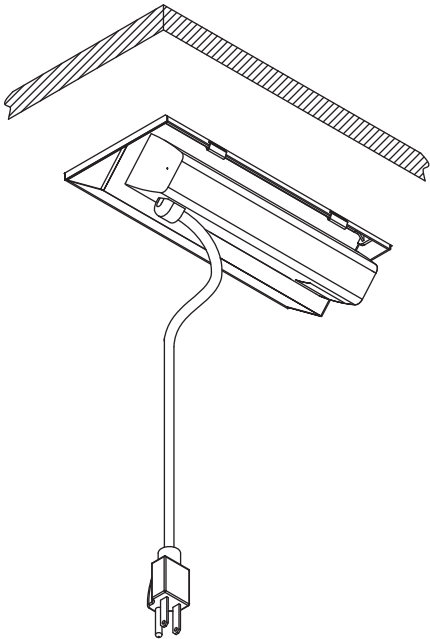
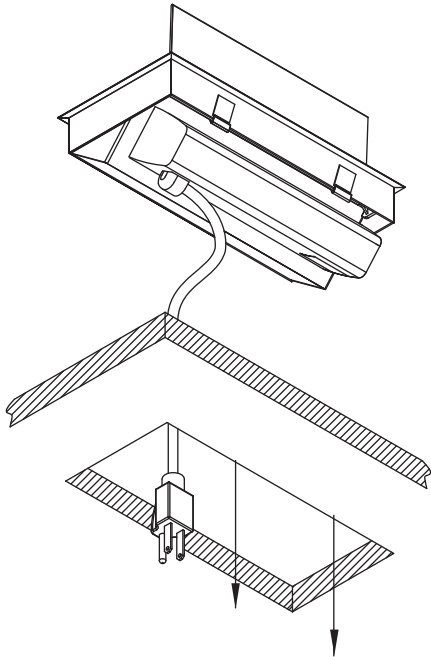
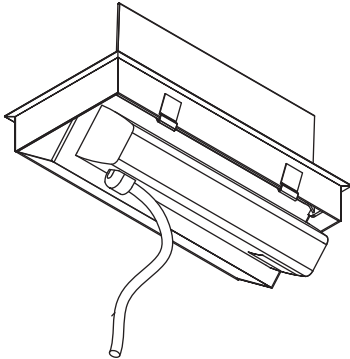
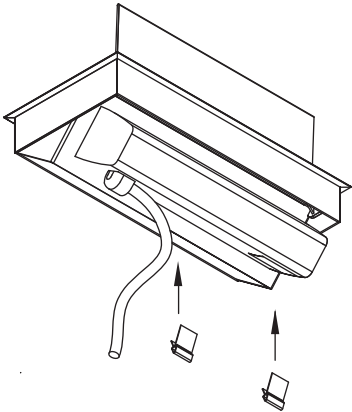


INSTALLATION INSTRUCTIONS FOR ELLORA™

Install data jacks as described in the installation instructions provided with the data adapters, BE01421

Part Number		"X" Dim.
BE 02511	4 Ports	8.00
BE 02511	6 Ports	11.00
BE 02511	8 Ports	14.00

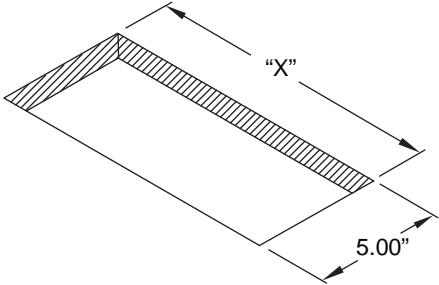

Note: In a conduit application; conduit should be supported according to local code.