


INSTALLATION INSTRUCTIONS FOR THE BYRNE DATA ADAPTER KIT



1. Select the appropriate BE01421 adapter from the chart below (example:
Uniprise jack would use "AA" adapter as marked on back of adapter).

*Jacks, not included, UL Listed (DUXR) or Recognized (DUXR2) jacks required.

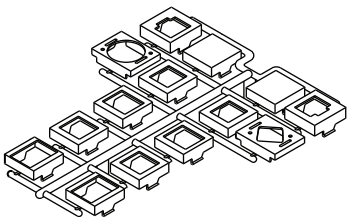

Adapter	Manufacturer	Website
AA	Systimax/CommScope	www.Commscope.com/Systimax
AA	Uniprise/CommScope	www.Commscope.com/Systimax
BB	L-Com Keystone Modular	www.L-Com.com
BB	Tyco SL, and 110 Connect Series Modular Jacks	www.Ampconnect.com
BB	Siemon Keystone Style	www.Siemon.com
BB	Allen Tel Versa Tap Series	www.Allentel.com
BB	Leviton Quick Port [®] Series	www.Leviton.com
BB	Nordx Keystone Style	www.Nordx.com
CC	Tyco SL Coupler Series	www.Ampconnect.com
CC	Krone 6000 Series/ADC	www.Adc.com
CC	Hubbell Xcelerator [™] Keystone Series	www.Hubbell.com
DD	Blank (no coupler/jack)	
EE	Ortronics TracJack Series	www.Ortronics.com
FF	Panduit Mini-Com Series	www.Panduit.com
GG	Microphone Jack/3-pin XLR, solder type only	www.Byrne-Electrical.com
HH	Video Monitor Jack/DB-15, panel mount solder style	www.Byrne-Electrical.com

2. Snap jack into adapter following the instructions provided with the jack.
3. Once assembled, snap adapter into the notched, square holes in the orientation shown.

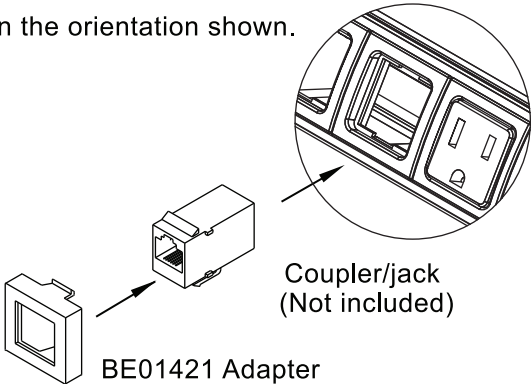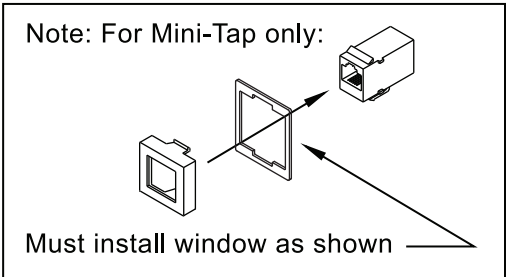

Note: Please verify fit of jack in adapter before ordering large quantities as manufacturer designs may change without notice.