


910CL Training

VER 1.1

910CL Training

910CL Optical Fiber Cleaver


- Capable of cleaving single mode and multimode fibers.
- Same adapters as the 910FS.
- Shipped in soft carry case with adjustment tools/instructions.
- Cleaving wheel is specified for 12,000 cleaves.
- Cleaving wheel is user serviceable/replaceable

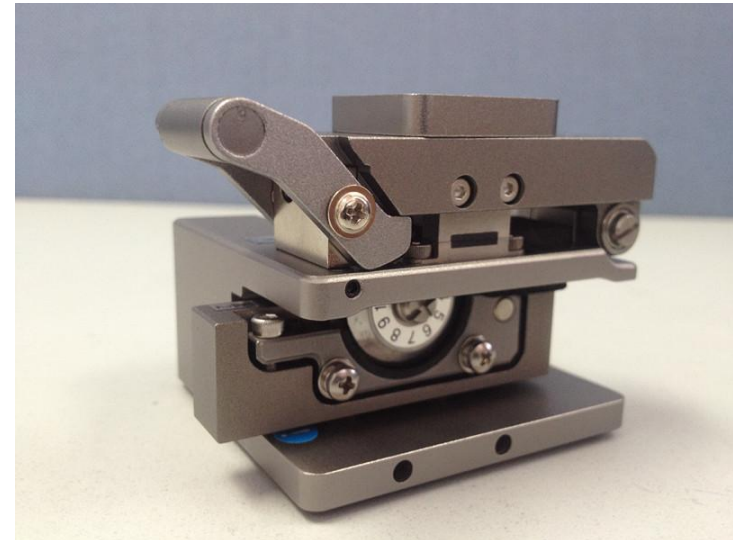

910CL Training


Operation

1. Strip and clean buffer from fiber.
2. Insert fiber into the appropriate fiber adapter (250, 900).
3. Open cleaver clamp.
4. Move cleaving wheel to the position closest to you.
5. Insert fiber adapter into the cleaver.

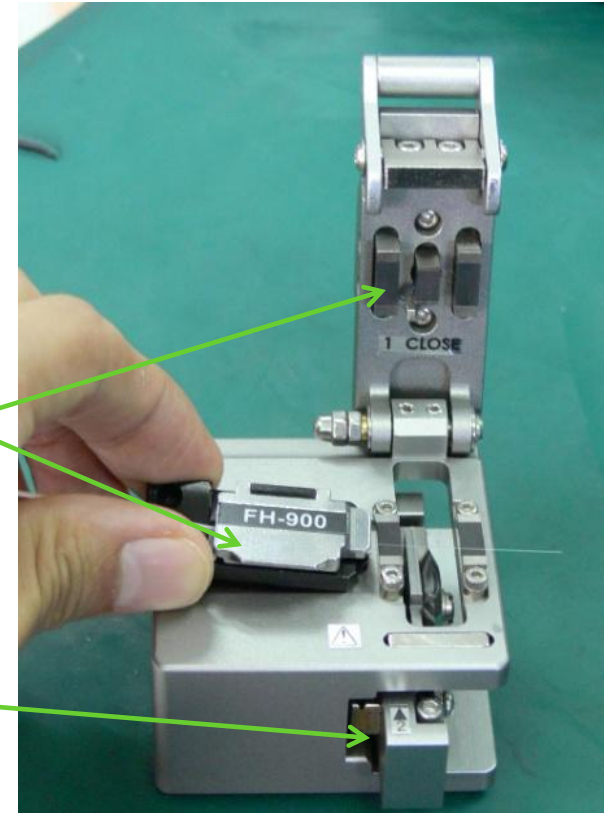

910CL Training

6. Close the cleaver clamp.
7. Slide the cleaving wheel mechanism away from you.

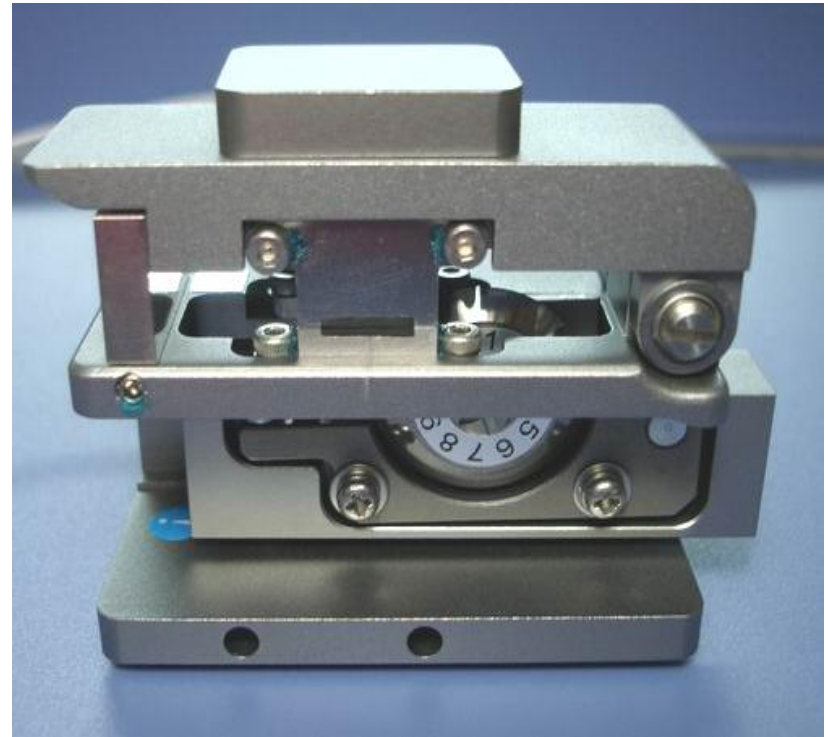

910CL Training

8. Open the cleaver clamp mechanism.
9. Discard the cut fiber end in an appropriate storage device.
10. Remove the fiber adapter from the cleaver with the cleaved fiber – do not let the cleaved fiber end touch anything.

Contact Greenlee sales or your representative for pricing.

Sales and Technical Support

Greenlee Communications

1390 Aspen Way

Vista, CA, 92081

www.greenlee.com

1- 800-642-2155