


If it's not **YELLOW** and **BLACK** it's **NOT** the **Original!**



WASP[®] AMS[®]

WASP AMS Kit 1 - Assembly Instructions

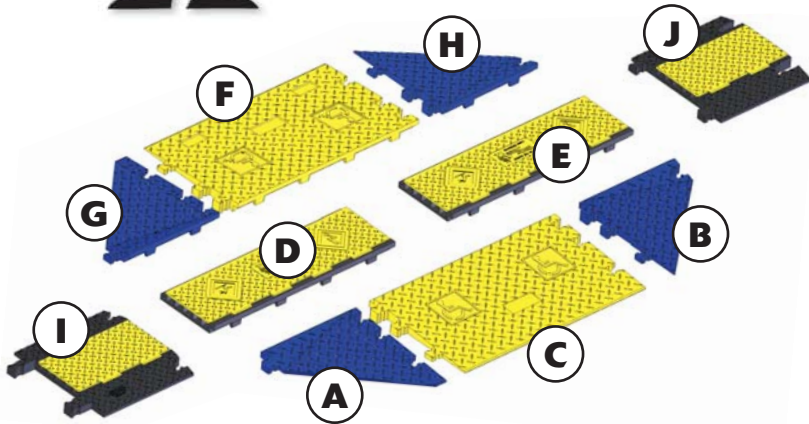


These ten (10) sections are included:

- | | |
|--|--------------------------------------|
| A Left Female Barrierfree AMS™ | F Male ADA ramp |
| B Right Female Barrierfree AMS™ | G Left Male Barrierfree AMS™ |
| C Female ADA ramp | H Right Male Barrierfree AMS™ |
| D Center Section | I Interconnect |
| E Center Section | J Interconnect |


TO FACILITATE ASSEMBLY:

Before proceeding, locate and identify all sections and place them approximately in the configuration indicated in the diagram to the left.

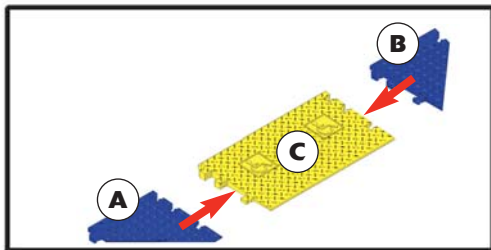


STEP 1 - Build Lower Side

- Connect the blue (left female) Barrierfree AMS™ (**A**) to female ADA ramp (**C**)
- Connect the blue (right female) Barrierfree AMS™ (**B**) to female ADA ramp (**C**)
- *Step down firmly on the connectors to snap them into place*

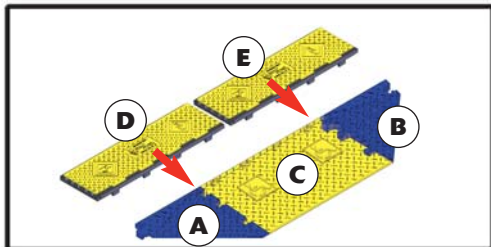


STEP 2 - Attach Center Sections to Lower Side

- Lift center section (**D**), align connectors with ramps (**A & C**)
- Lift center section (**E**), align connectors with ramps (**C & B**)
- *Step down firmly on the connectors to snap them into place*

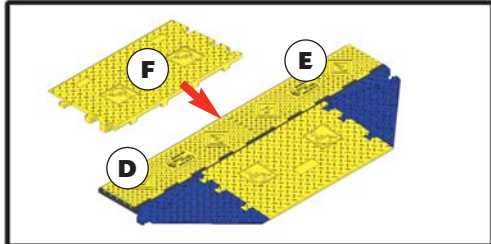


STEP 3 - Attach Top Ramp to Center Sections

- Place connectors of male ADA ramp (**F**), over the connectors of the two center sections (**D & E**) ... *be sure to center the ramp*
- *Step down firmly on the connectors to snap them into place*

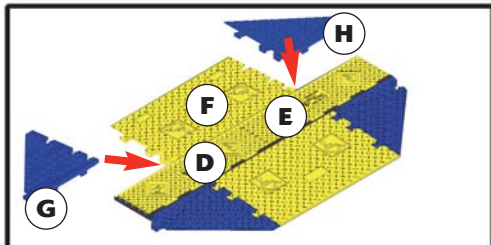


STEP 4 - Complete Upper Side

- Place connectors of blue (left male) Barrierfree AMS™ ramp (**G**), over connectors of male ADA ramp (**F**) ... *making sure to also align with the connectors on center section (**D**)*
- Place connectors of blue (right male) Barrierfree AMS™ ramp (**H**), over connectors of male ADA ramp (**F**) ... *making sure to also align with the connectors on center section (**E**)*
- *Step down firmly on the connectors to snap them into place*

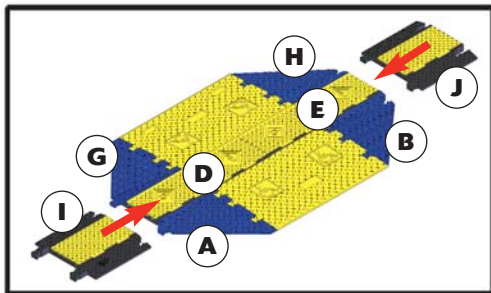

STEP 5 - Attach Interconnect Sections

- Align Interconnect (**I**) with center section (**D**) and the connectors on the blue Barrierfree AMS™ ramps (**A & G**)
- Align Interconnect (**J**) with center section (**E**) and the connectors on the blue Barrierfree AMS™ ramps (**B & H**)
- *Step down firmly on the connectors to snap them into place*

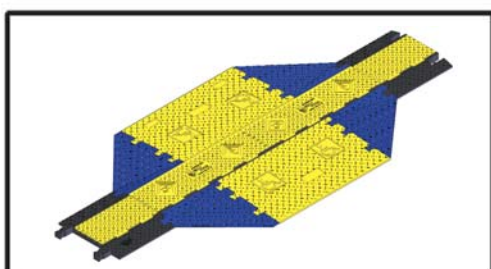

STEP 6 - Complete Assembly

- *Step down firmly on all connectors to ensure that they have completely snapped into place and that each section is fully connected to all of the adjacent sections.*

U.S. Patent # 7,595,450
U.S. Patent # 7,592,547
U.S. Patent # 7,385,139

YELLOW JACKET
CABLE PROTECTORS

Tel 626.357.7051 • Fax 626.303.3066 • sales@yjams.com • www.yjams.com
P.O. Box 1557, Duarte, CA 91009-4557 • 2350 East Central Ave., Duarte, CA 91010-2984

Ask for the Original ... Ask for the Best ... Ask for Yellow Jacket!

A Division of Peterson Systems International, Inc.